



ECOTILE AUSTRALIA

Introduction

Constat consists of 7mm thick interlocking tiles that can be dry laid over any hard surface. When installed in conjunction with a grounding kit and used with appropriate footwear the tiles will provide an attractive and cost-effective ESD protected work surface. As well as offering a permanent solution to the problems caused by static discharge Constat offers excellent durability and is very quick and easy to install.

Earthing Guidelines

The tiles can be used by themselves to provide an anti-static floor or in conjunction with grounding kits to make the floor conductive. To achieve a conductive floor surface each tile has to be earthed. This is achieved by laying Velostat strips underneath the tiles. The Velostat then needs to be earthed. It is recommended that you have one earthing point per 30m² of Constat and/or one earthing point for each section of Constat.

Working Method

1. Sweep or vacuum clean the floor, removing any high points in the floor and fill any holes with a rapid setting floor repair compound.
2. Lay the Velostat strip in parallel lines at 1m intervals down the longest length of the room from wall to wall (see diagram 1).
3. Lay further lines of Velostat at 90° at 5m intervals from your first earthing point across the shorter length of the room to form a grid.
4. Once you have formed the grid you can start laying the tiles
5. Starting from the centre of the room lay the first four tiles in a square ensuring that the interlocking joints are centred on the Velostat strip (i.e. all 4 tiles are in contact with the Velostat) Work outwards from the centre being careful to ensure that the interlocking joints stay in contact with the Velostat conductive strip.
6. Cut the tiles to a straight edge, leave a 5mm gap between any fixed point and the tiles to allow for expansion.
7. Connect the Velostat strip to your grounding source and you have an ESD safe conductive floor!

Installing a Constat Conductive Floor



Ecotile Australia

ABN: 26 107 409 932

Postal Address:


P.O.Box 4215
EAST GOSFORD NSW 2250

Telephone (TOLL FREE):

1300 137 502

Fax: (02) 4367 5092

Diagram 1

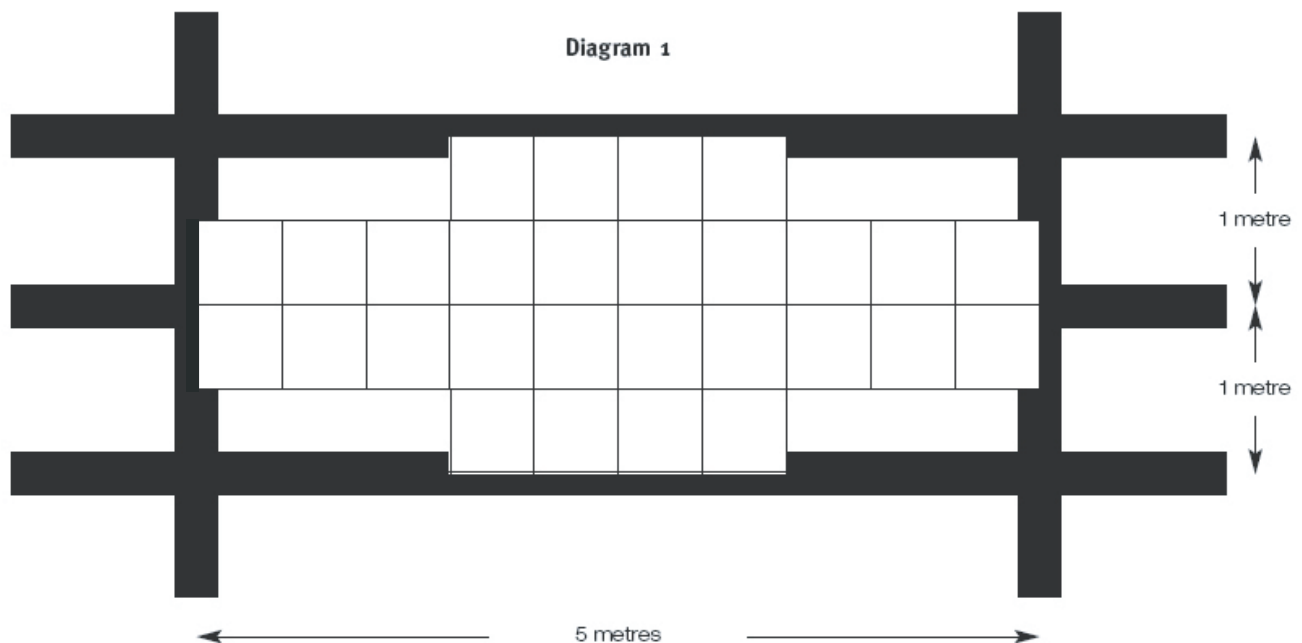

www.ecotile.com.au